


1.) SET THE STAKES.

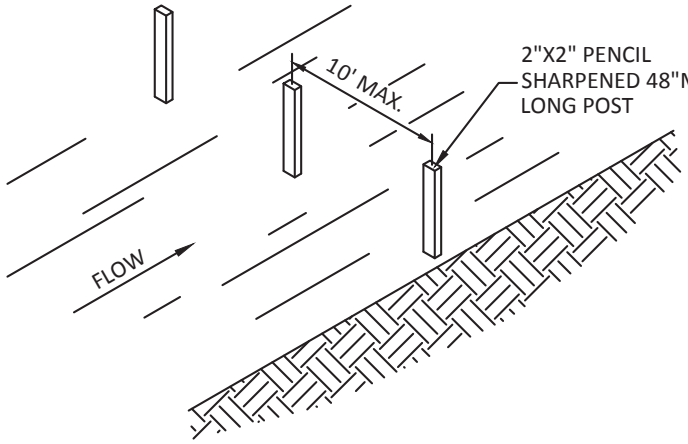


2.) EXCAVATE A 4"X4" TRENCH
UPSLOPE ALONG THE LINE STAKES.

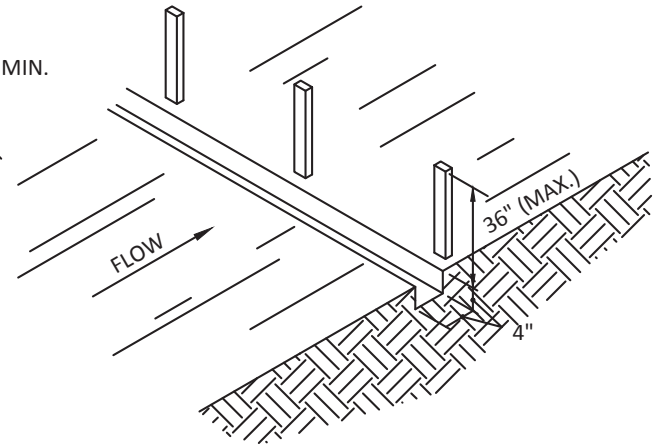


3.) STAPLE FILTER MATERIAL TO STAKES
AND EXTEND IT INTO THE TRENCH.

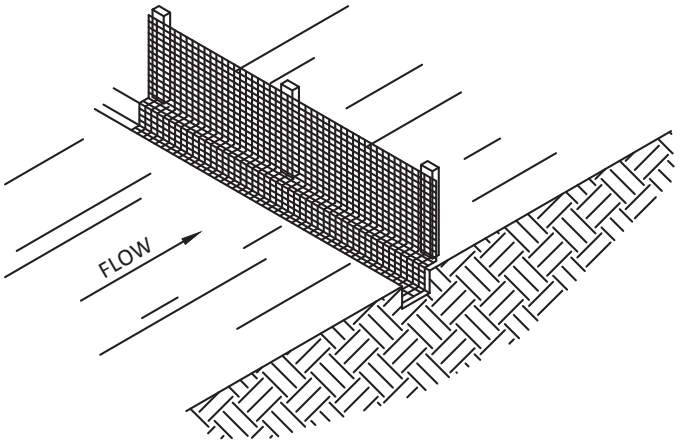

4.) BACKFILL AND COMPACT THE
EXCAVATED SOIL.

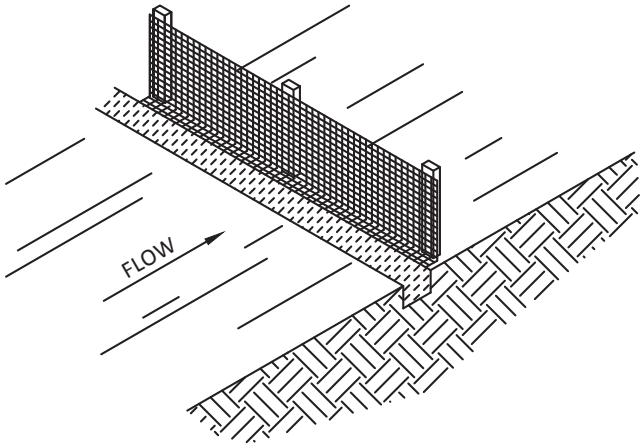

SILT FENCE INSTALLATION DETAIL



EST 1808 CITY OF DELAWARE OHIO Public Works Department	STANDARD DETAIL SILT FENCE INSTALLATION DETAIL	EROSION ERSD-4.0 Rev. 12/31/2018